

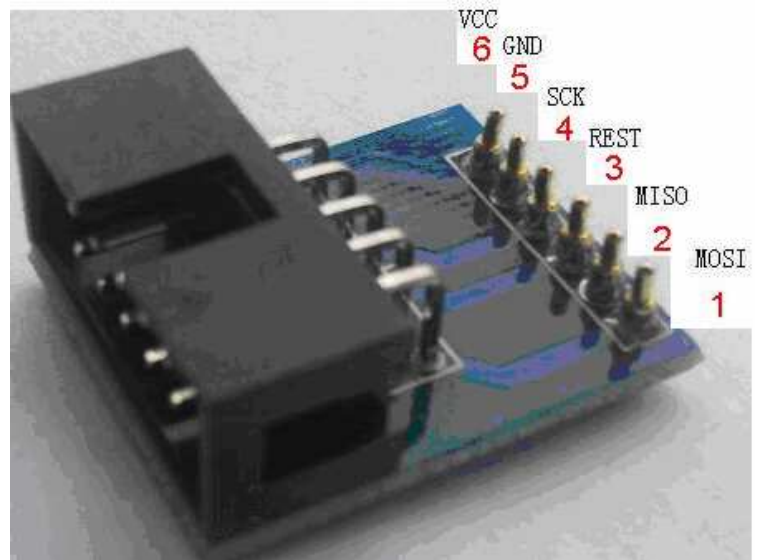
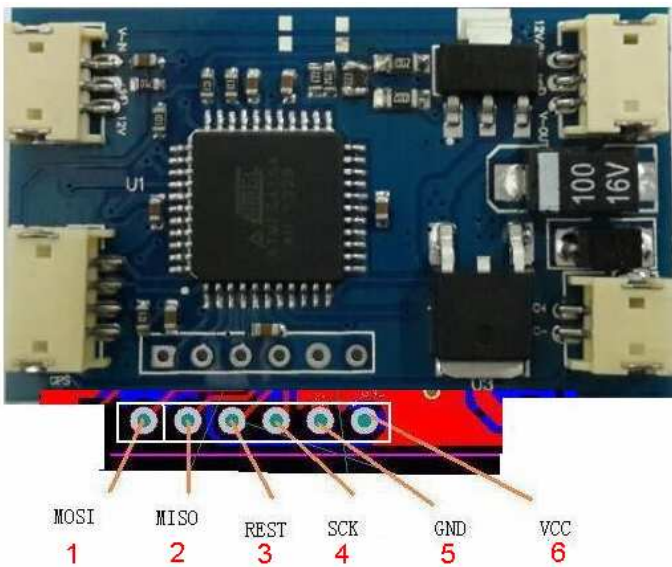


Flashing SUPPO OSD Firmware

Hardware Tools:

USBASP	
SUPPO OSD Programming adaptor	

Pins setting on OSD:

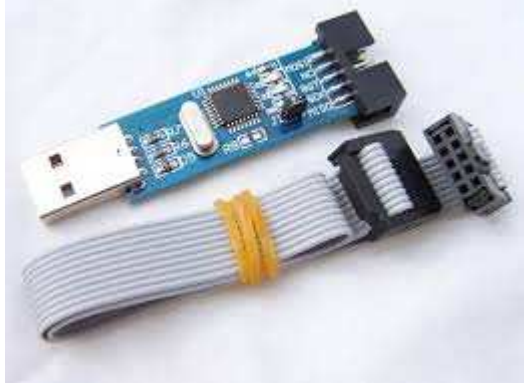

Software:

- 1) Driver for USBASP: ask the supplier or also lot of available on internet. Or download from suppomodel.com
- 2) Software for USBASP AVR programmer: Freeware "AVRDUDE"
Or **AVR Fighter** Chinese free ware (recommended but only has Chinese Version, download from suppomodel.com)


Programming Steps

AVR fighter interface:




Programming steps:

- 1, Select MCU type: Atmega16
- 2, Read chip;
- 3, Read Fuse setting;
- 4, Load Flash
- 5, Programming (upload flash to OSD)

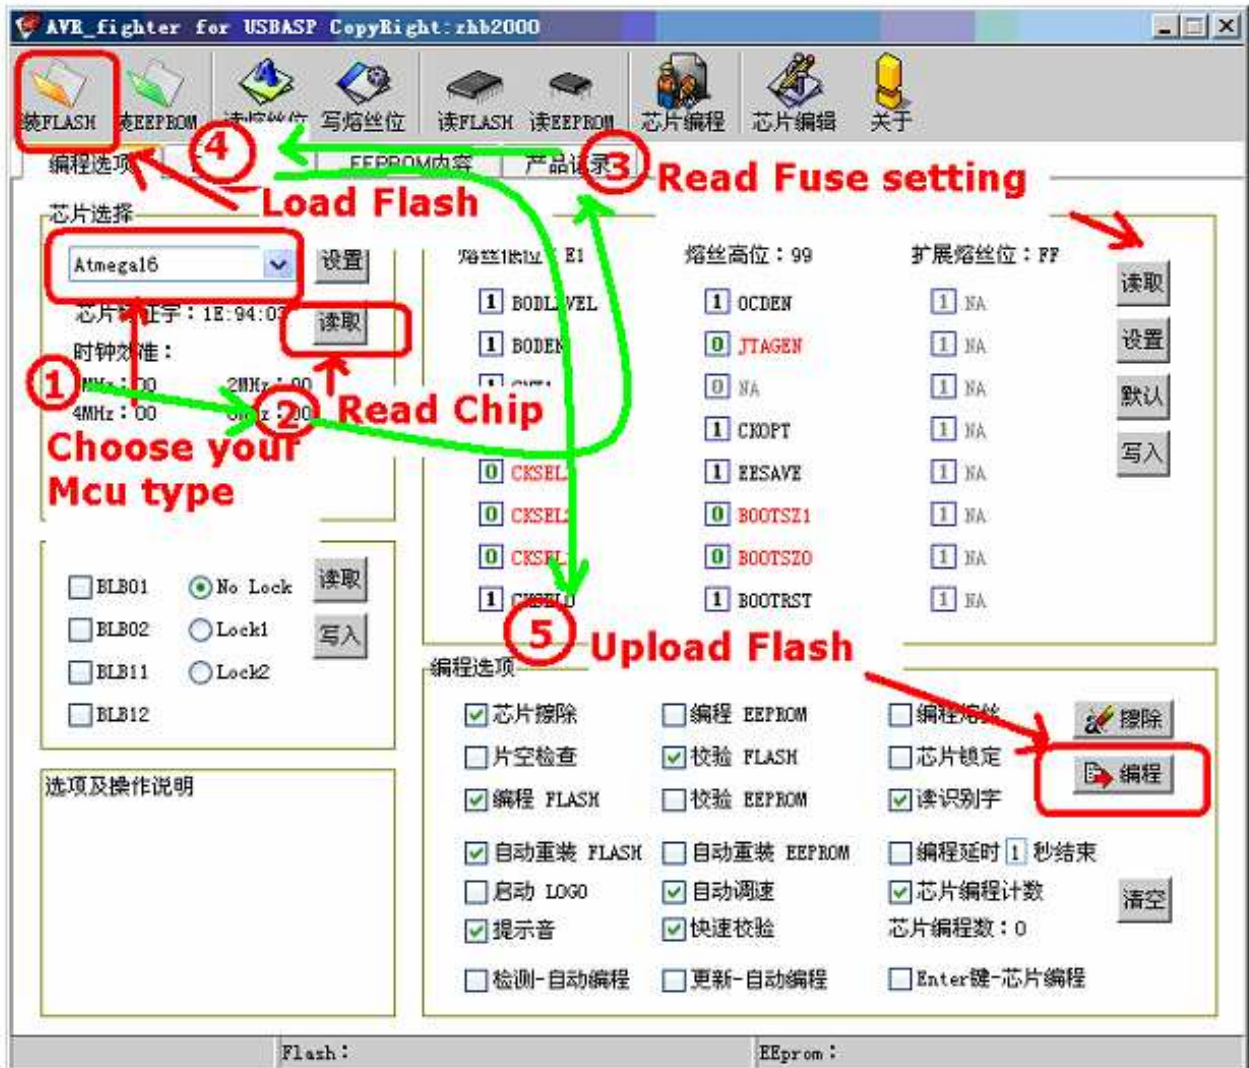


Steps:

1) set your MCU to Atmeg16;

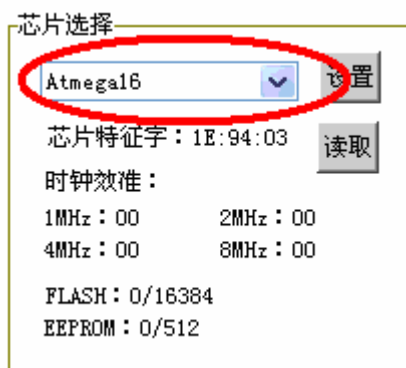

2) read Chips Character;

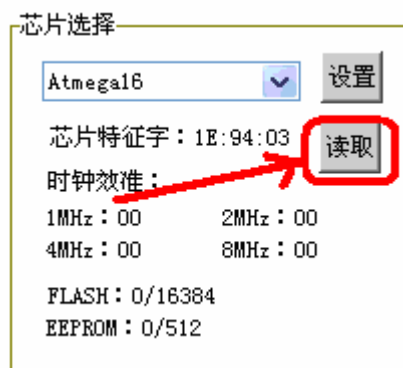


3) Read Fuse Setting




4) Load your flash file to be burn to the MCU.




click "Load Flash", choose your flash file.

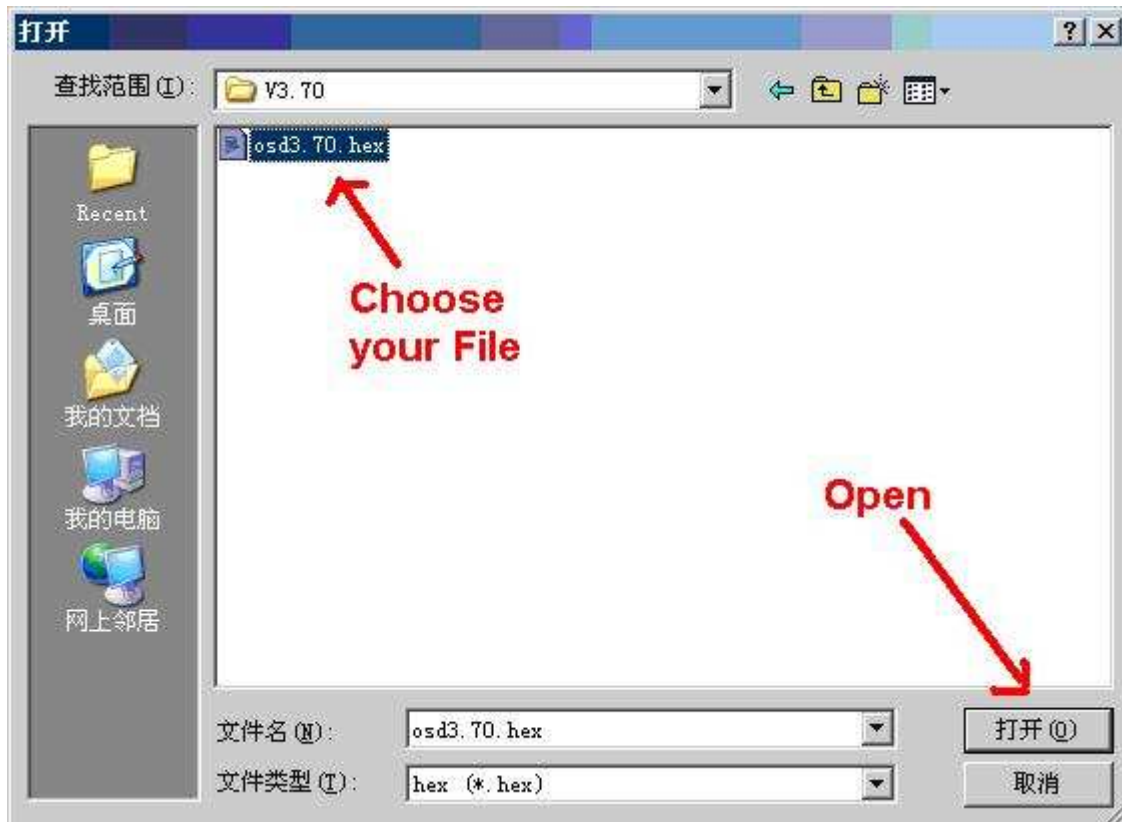


5) Upload /program your flash to MCU.

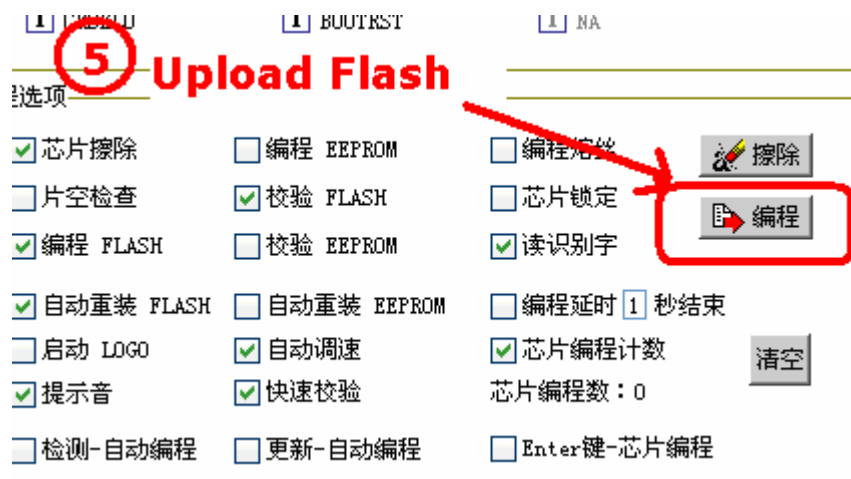

6) Flashing.....

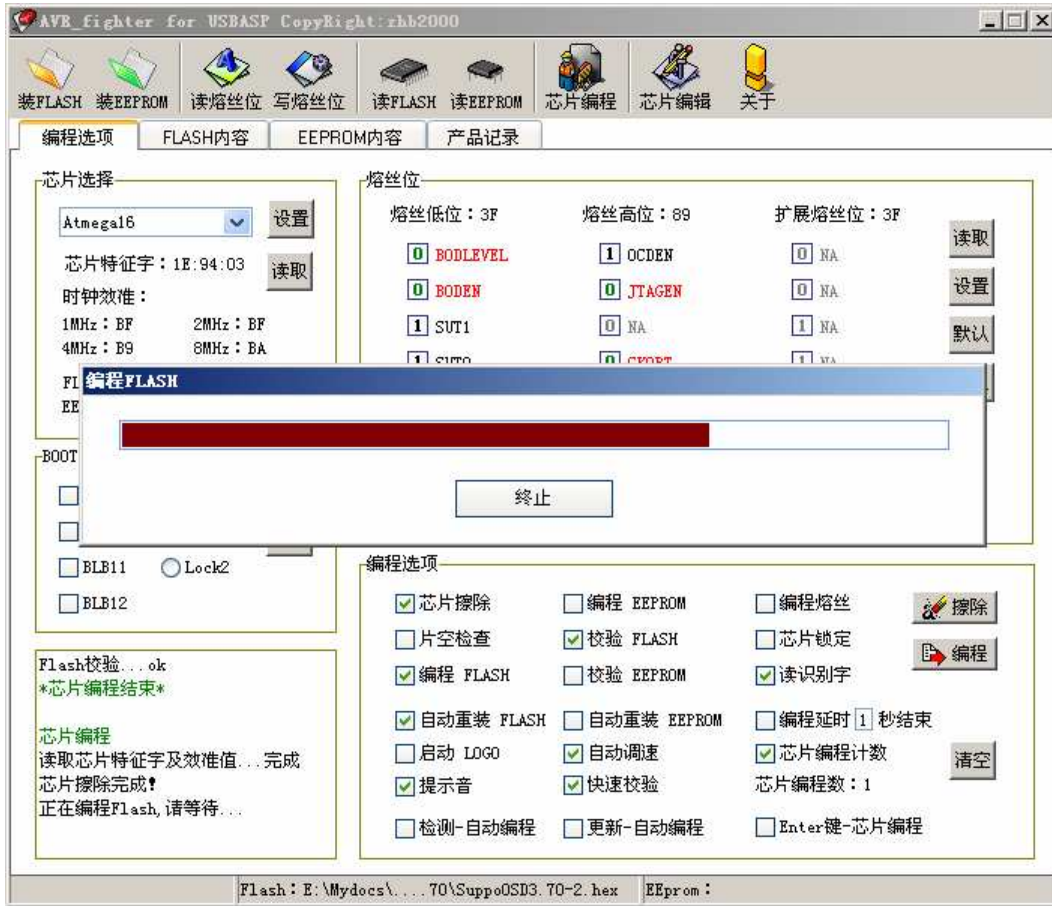

7) Calibrating

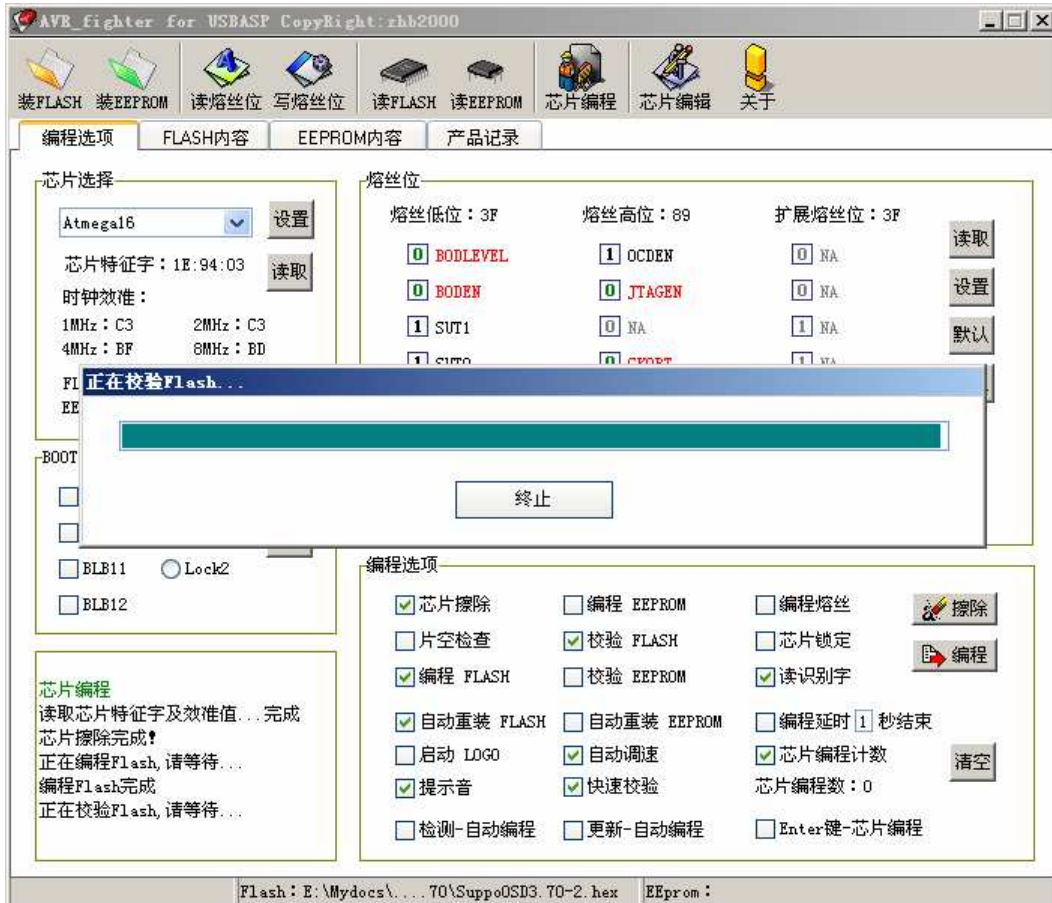

8) Congratulation..... Done.